


PALLET SCALE

Product Number 2815

Trade, commerce and industry

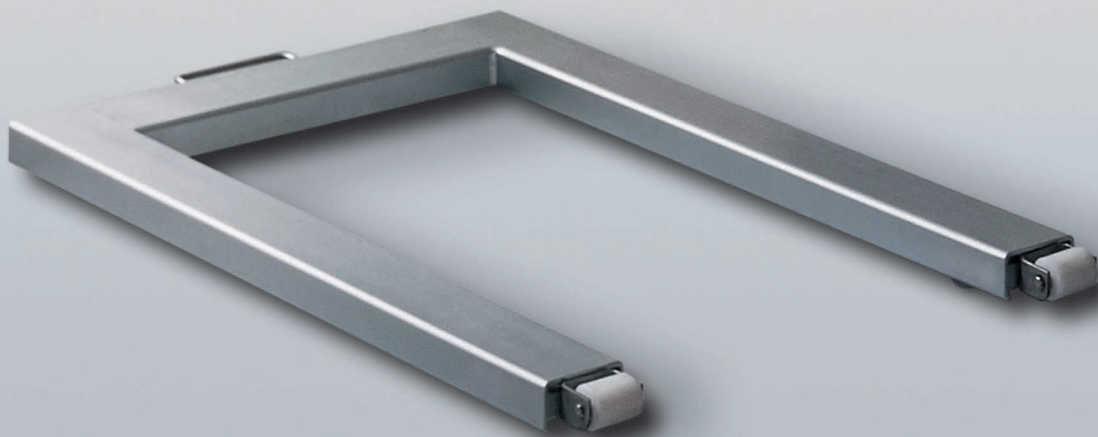

- > Approvable
- > Ultra flat design
- > Maintenance-free design
- > Take the scale to the weighing product

PALLET SCALE

Product Number 2815

Features



The Portable Pallet Scale 2815 can weigh directly on the loading ramp. This reduces loading and unloading times and frees up personnel. It's not the pallets that have to go to the scale, it's the other way round. The front has a handle for carrying, and castors are attached to the fork ends as standard.

Design

- > Industry-standard steel construction, painted light grey, also in stainless steel 1.4301; load cells also made of stainless steel, Protection Class IP 68
- > 6m measuring cable to connect the pallet scale to the indicator
- > Function for counting mass parts of identical weights

- > Program Terminals 3030, 3020 and 3010 equipped with piece count function as standard
- > With lighter parts, it is recommended to connect an additional scale (reference scale) with a smaller weighing range
- > Scale with 6m measuring cable (other cable lengths possible)

Scope of delivery

- > Scale with 6m measuring cable (other cable lengths possible)

Options

- > Weighing platform made of painted steel or stainless steel
- > Floor stand for the indicator made of painted steel or stainless steel

Indicators

Indicators

The weighing platforms can be connected to all approvable Soehnle Professional indicators. Choose the best indicator for your application. The indicators are listed in our catalogue.

Ordering information

Order Numbers	Design	Weighing Range	Divisions		Intrinsic Weight
			kg	g	
2815.21.002	Stainless steel	600	up to 300kg = 100g	from 300kg = 200g	55
2815.22.002	Stainless steel	1500	up to 600kg = 200g	from 600kg = 500g	55
2815.11.002	painted	600	up to 300kg = 100g	from 300kg = 200g	55
2815.12.002	painted	1500	up to 600kg = 200g	from 600kg = 500g	55
2815.13.002	painted	2500	up to 1500kg = 500g	from 1500kg = 1000g	55

Your Soehnle Professional dealer:

www.soehnle-professional.com