


# FLOOR SCALE

PRODUCT NUMBER 9016

Trade, commerce and industry

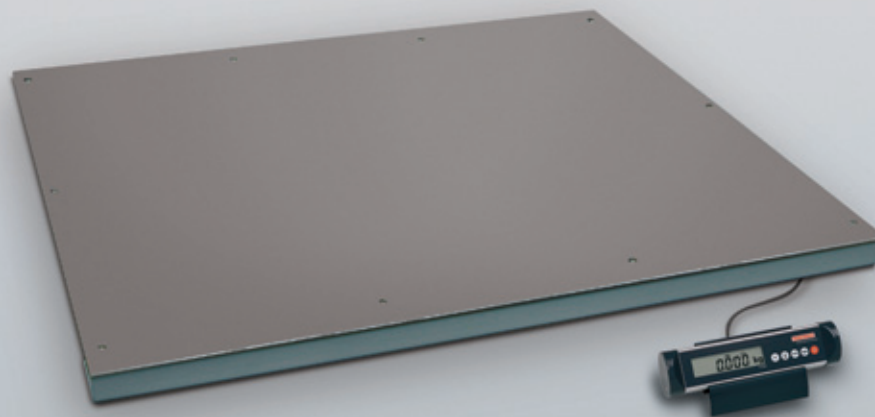

- › For integration or installation
- › High resolution version with weigh, count, check and batch functions
- › Digital indicator with Protection Class IP 65
- › Backlit indicator with 20mm high digits

# FLOOR SCALE

PRODUCT NUMBER 9016



## Features

Complete with digital indicator and suitable for floor installation in incoming goods, store or shipment departments, for example. For non-approved weighing operations and checks. There are several platform sizes, weighing ranges and versions available.

### Weighing platform

- › Ultra flat design
- › Accessories: drive-on ramps and installation frame
- › Painted light grey, platform made of steel (smooth, painted black)
- › The measuring cable between weighing platform and digital indicator is a standard length of 6m. Different cable lengths on request.

### Digital indicator 2790

- › Sturdy housing made of anodised aluminium alloy
- › Dust and splash-proof, Protection Class IP 65
- › Backlit 20 mm LCD
- › Membrane keyboard with pressure point, 5 keys for on/off, zero, tare, data transfer/printer and function
- › Counting function
- › Mains power data: 230V, 50/60Hz, 60mA, 13.8VA
- › Battery power supply for approx. 25 hrs by 4 x 1.5V Mignon cells

### Scope of delivery

- › Power adapter with 2m power cord
- › Bench and wall bracket


### Options

- › RS 232 serial interface, floating – high protection against interference from external lines
- › Charge adapter with rechargeable battery for approx. 25 hrs service time

### Accessories

- › Installation frame made of stainless steel with integrated support surfaces for simple scale installation, foundation drawing on request
- › 1 or 2 drive-on ramps painted on narrow sides, drive-on length 1m on each side
- › Base plate installation kit for surface mounted scales; consists of 2 base plates, bolts, plastic dowels and washers (Order No.: 2510.24.001)

Installation frame

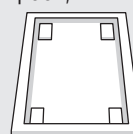

Installation kit



## Ordering information

Order Numbers	Order Numbers	Weighing Range	Divisions	Load Capacity	Platform Size
without interface	with interface	kg	g	kg	mm
9016.07.001	9016.07.002	600	100	1500	800 x 1000 x 80
9016.17.001	9016.17.002	600	100	3500	1000 x 1250 x 80
9016.18.001	9016.18.002	1500	200	3500	1000 x 1250 x 80
9016.27.001	9016.27.002	600	100	3500	1250 x 1500 x 80
9016.28.001	9016.28.002	1500	200	3500	1250 x 1500 x 80
9016.29.001	9016.29.002	2500	500	3500	1250 x 1500 x 80

Your Soehnle Professional dealer:

[www.soehnle-professional.com](http://www.soehnle-professional.com)