


Special weighing platforms / solutions

Weighing platform 2894.00

for large platforms with fine resolution

Special solution for a weighing platform with 800 x 600 mm platform size and an approvable weighing range of 15 kg with scale intervals of 2 g up to 6 kg and 5 g up to 15 kg. Carried out with lightweight platform and 4 load cells in solid foundation.

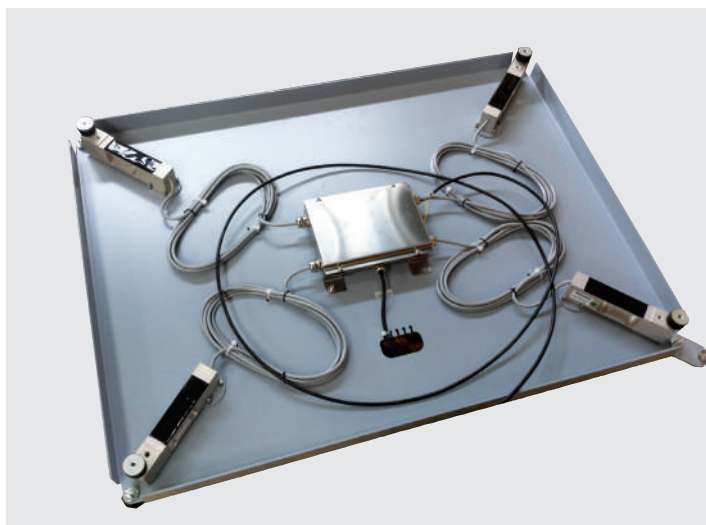


> Base of the scale with 4 load cells



Calibration 15 kg and 2/5 g scale interval

Weighing platform 2819.60

Large floor scale made of painted steel with stainless steel platform

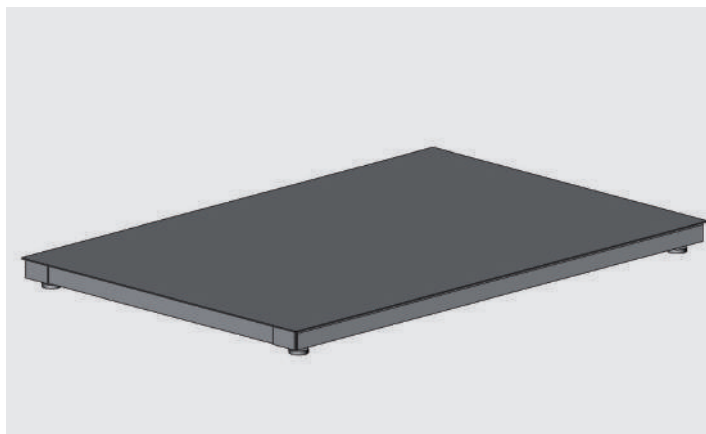

Lightweight design for weighing range 300 kilograms and scale interval from 50 g

- > Platform dimensions up to 1500 x 1000 x 80 mm
- > Weighing ranges up to 300 kg, approvable
- > Scale interval 50 g / 100 g (2-range)
- > With 4 DMS load cells type SEB46B
- > Load capacity 400 kg
- > Load plate is fixed on the weighing platform with 4 snap fasteners
- > V2A-load plate smooth, glass bead blasted, removable and without holes
- > Carrier frame made of painted metallic gray steel
- > Measurement cable L = 6 m
- > EU approval ex factory